

1 Measure the complete blind width

Face mounting: measure the intended overall blind width at the outside bracket edges or headbox ends. Inside a reveal: measure the opening width at top, centre and bottom; record the smallest. Face fix / Top fix describes how the brackets attach.



Straight Drop blind: Blindmotion Online product image

WIDTH REFERENCE POINTS

Open brackets


Measure from the outside of the left bracket to the outside of the right bracket.

Headbox

Measure edge to edge across the complete headbox, including end caps.

2 Measure from the top to the floor

Drop starts at the TOP of the bracket or headbox and finishes at the floor. Keep the tape vertical. Measure at the left, centre and right.

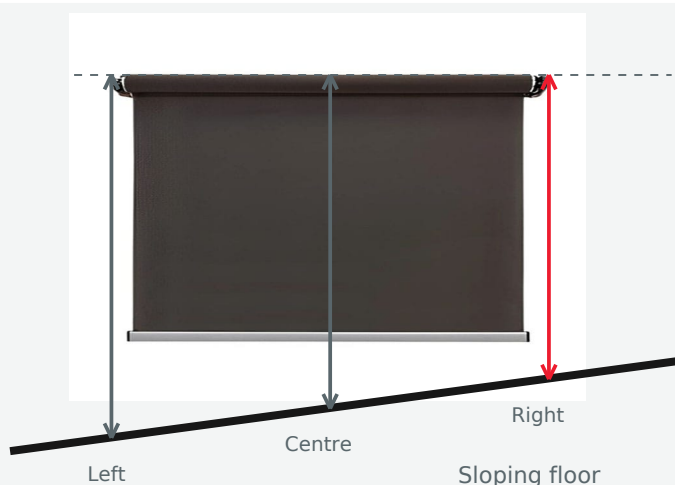

Use the shortest drop

A sloping floor gives different readings. Record all three and use the shortest drop so the bottom bar can remain level.


In this example, the right-hand reading is the shortest.

Face mounting: enter your overall blind width in the Width (mm) field. **Reveal mounting:** contact Blindmotion with your smallest opening width before ordering to confirm the width to enter and the required fitting deduction.

3 Check space for the rolled fabric

FACE FIX / OPEN ROLLER


End view · bracket fixed to wall

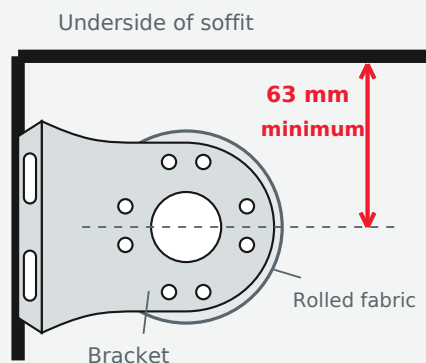

Measure vertically from the roller centreline to the underside above.

TOP FIX / CUSTOM PELMET

End view · bracket fixed overhead

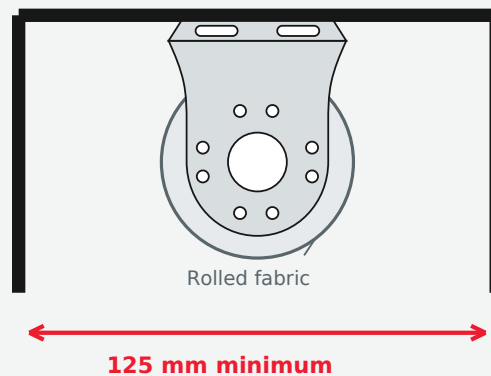

Clear INTERNAL depth: rear surface to inside of the front fascia.

Centre the blind in the opening.

Clearance illustrations not to scale.

These clearances apply to open rollers with drops up to 3000 mm on a 78 mm OD tube, using Vistaweave 99 or thinner fabric. For thicker fabrics or PVC, contact Blindmotion to confirm clearance before ordering.

For face-fix drops over 3000 mm, add 4 mm of centreline-to-top clearance per extra metre of drop, rounding up: up to 4 m = 67 mm; up to 5 m = 71 mm. For deeper-drop pelmets, contact us. The 125 mm rule is for an open roller in a custom pelmet; it is not a supplied-headbox dimension.

4 Record and double-check before ordering

Location	Width mm	Drop left mm	Drop centre mm	Drop right mm	Order drop mm	Mounting type	Control side

Width: overall blind width (face mounting) or smallest opening width (reveal mounting).

Order drop: shortest reading. Mounting: Face fix / Top fix. Control: Left / Right viewed from front.

Order or view product options:

online.blindmotion.com.au/straightdrop-outdoor-blinds/

Need help? 1300 998 442 | sales@blindmotion.com.au