

Measure once, order with confidence


For Blindmotion Everyday and Premium roller blinds. Choose the fit first, then record the width and drop in mm. Use a metal tape measure and write each window location down.

IMPORTANT: enter MEASURED WIDTH

For recess fit, enter the opening width you measured. Blindmotion calculates Make Width by subtracting 4 mm. Do not subtract that allowance yourself.

1 Recess / reveal fit

The blind sits inside the window opening. Check handles and other obstructions before choosing a position. Measure the clear opening where the brackets will sit.

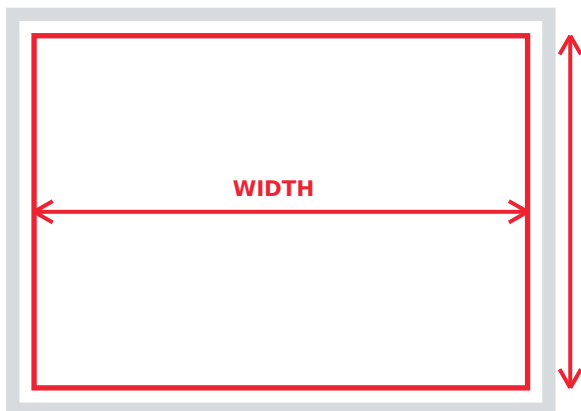

WIDTH

Measure inside edge to inside edge. Keep the tape firmly against both sides; read at the bend. Check at the intended bracket height and in more than one position. Record the smallest usable width.

DROP

Measure from the top of the reveal to the bottom or desired stopping point. Phil demonstrates reading where the tape begins to curl.

2 Face fit / architrave fit

The blind sits outside the opening. Plan where the brackets will mount and how much of the window frame you want the blind to cover.



WIDTH

Measure from the outside edge of one architrave to the outside edge of the other. Leave enough edge for secure bracket fixing; check the mounting position.


DROP

Measure from the proposed top mounting point down past the window frame for the coverage you want.

Choose roll direction - single blinds


Roll direction changes which side of the tube the fabric drops from. Decide this before ordering; check window handles and the space available.

FRONT ROLL

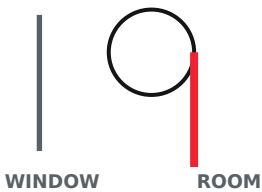

Fabric on room side.
Usually neater for recess fit, if clearance allows.

BACK ROLL

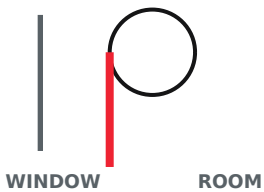

Fabric near window.
Best default for face fit blockouts; closer fabric reduces side light.

These are useful defaults, not rules. A handle, trim or bracket position can change the best choice. Back roll will not eliminate light gaps completely.

Before you enter the dimensions

- Match the fit and roll direction on the product page to your plan.
- Enter width and drop in mm; do not subtract the 4 mm make allowance yourself.
- Check handles, brackets, tiles and the full path of the blind.
- For dual or linked blinds, confirm the whole layout before ordering.

PHIL'S VIDEO EXAMPLES

Recess 1440 x 1550 mm | Face fit 1585 x 1700 mm

Watch Phil's two-minute measuring demonstration

<https://vimeo.com/1223322617/6d099eaa5e>

Unusual opening? Contact us before ordering.

Window measurement worksheet

Write one blind per row. Record width and drop in mm, then fit, roll direction and control side. Use Notes for obstacles and bracket position.

[illegible]